




### Motor Box Mounting Diagram

Bulkhead

Horizontal Motor Box

\* Clutch extends past edge of bulkhead

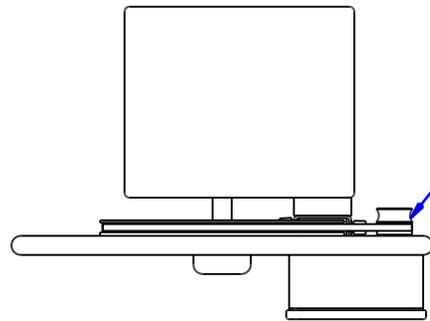

Clutch extends past edge of bulkhead to provide enough room to pull it out when disengaging autopilot. This is only necessary when the spoke-to-bulkhead distance is less than 2.25"

